

Portatarga – License Plate Support
PRTAM03

- Rimuovere la sella passeggero e la sella pilota dal veicolo. Smontare la vite di fissaggio e rimuovere la vasca portaoggetti (Fig.01).
 - Scollegare i connettori delle frecce post. dx/sx e della luce targa (Fig.02).
 - Rimuovere le N°4 viti + N°4 dadi di fissaggio del portatarga originale (Fig.03, Fig.04).
 - Rimuovere il portatarga dalla moto, sfilando i cavi delle luci dal lato inferiore (Fig.05).
 - Tagliare le fascette di trattenuta dei cavi (Fig.06).
 - Posizionare N°4 viti M6x30 + N°4 distanziali h16 sulla piastra di sostegno del portatarga (Fig.17).
 - Montare il portatarga sulla moto, riutilizzando i N°4 dadi M6 precedentemente rimossi (Fig.18, Fig.19).
- Remove the passenger saddle and the driver's saddle from the vehicle. Remove the fixing screw and dismount the glove compartment (Pic.01).
 - Detach the connectors of the RH/LH rear blinkers and of the license plate light (Pic.02).
 - Remove no.4 screws + no.4 nuts fixing the standard license plate holder (Pic.03, Pic.04).
 - Remove the license plate holder from the vehicle, pulling out the light cables from the lower side (Pic.05).
 - Cut the cable holding clamps (Pic.06).
 - Position no.4 screws M6x30 + no.4 spacers h16 on the support plate of the license plate holder (Pic.17).
 - Mount the license plate holder on the vehicle, by using the previously removed no. 4 nuts M6 (Pic.18, Pic.19).

